



SERVICE BULLETIN



SUBJECT: Replacement Procedure for New Style Power Cord for Scroll Compressor

BULLETIN NO. C 042

DATE: December 4, 2000

All scroll compressors in units built after 9/15/00 include a new style compressor power cord. The power cord requires the use of a new dielectric grease during service or replacement.

Thermo King recommends that this special grease and a new gasket be used when replacing a compressor or repairing a new style compressor power cord connection. The grease, gasket and a new grounding screw and washer are provided in Power Cord Grease Kit, P/N 40-779.

Thermo King also recommends that this special grease and a new gasket be used when replacing an old style compressor power cord with a new style cord. Two power cord kits are available from Service Parts:

PN	Where Used
40-781*	Units with μ P-D Controller
40-782*	Units with MP-3000 Controller and CRR DF Units

* Both kits include a power cord, grease, gasket and a new grounding screw and washer


Replacing an Old Style Compressor Power Cord

When replacing an old style compressor power cord with a new style cord, follow this procedure:

1. Make sure the unit On/Off switch is OFF.
2. Make sure the 460/230V unit power cord has been disconnected from the power supply.

WARNING: To prevent against personal injury from dangerous electrical shock from high voltage controls, disconnect the supply power to the unit before working on the compressor power cord.

3. Remove the terminal box cover.
4. Remove the ground screw and disconnect the ground wire. Then unplug power plug from the compressor receptacle.
5. Remove the old sealing gasket (orange) and discard. If a foam rubber gasket is present between the sealing gasket and the compressor body, it must also be removed and discarded.
6. Wipe the old grease from compressor's electrical connections with a dry rag.

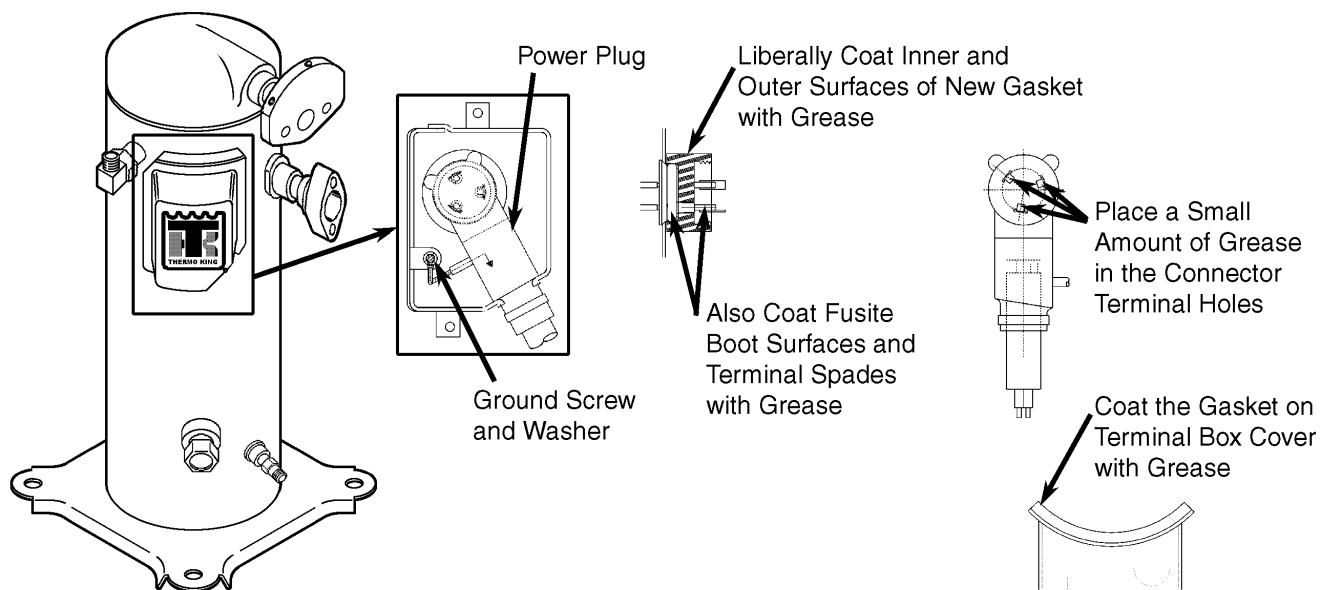

Compressor Power Cord Replacement

USE ONLY **THERMO KING** FACTORY APPROVED REPLACEMENT PARTS

314 West 90th Street, Minneapolis, Minnesota 55420

MGR



SALES



SERVICE



PARTS



7. Wipe down the electrical connections again using a rag and common cleaning solvent. Any common solvent such as paint thinner, lacquer thinner or mineral spirits is sufficient.

NOTE: All visible grease residue should be removed.

8. Install the new sealing gasket (orange) on the compressor receptacle.
9. Cut open a corner of the grease packet. Liberally coat the inner and outer surfaces of the gasket with grease. Also coat the fusite boot surfaces and terminal spades with grease.

10. Place a small amount of grease in the connector terminal holes of the power cord.
11. Lightly push the power cord connector onto the terminal spades and into the gasket. Then slide the connector into the terminal box slot.
12. Connect the ground wire using the new screw and washer.
13. Lightly coat the gasket on the terminal box cover with grease.
14. Install the terminal box cover.